

## Troubleshooting

### **Q: Why won't buttons respond?**

A: If the lock indicator stays solid yellow, child lock is enabled. Pressing any other button triggers a beep and flashing yellow lock indicator to alert you to unlock it first.

### **Q: How do I set the sleep timer?**

A: Short press Timer Button to select:

- 30min | 60min | 90min
- No timer: non-stop play

Green timer indicator light confirms your selection.

The unit will power off once the timer ends to save battery life.

### **Q: Why does my sound machine shut off on its own?**

A: Check whether a timer was selected. If not, the battery may need recharging.

### **Q: Why can't I fully mute the unit's sound?**

A: The lowest volume is intentionally set above silent to help prevent the unit from running unnoticed and draining the battery overnight.

To stop playback completely, turn the unit off.